


PUF Disk Sampler (TE-200 PAS) Standard Operating Procedure (SOP)

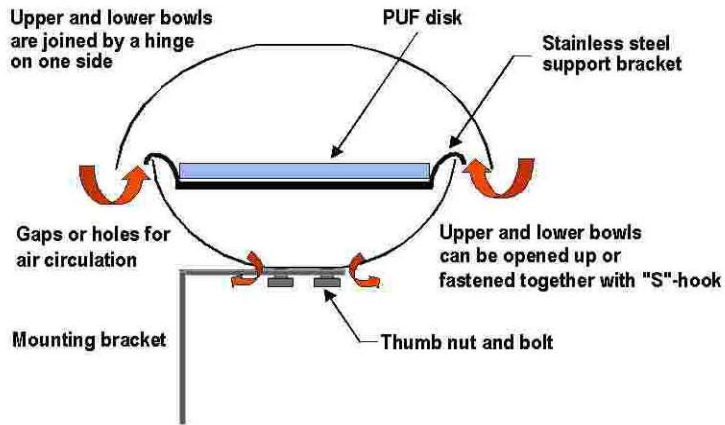

Equipment:

- Outdoor passive air sampler housing (Model TE-200-PAS, Tisch Environmental Inc.)
- "L"-bracket
- Cable ties of varying lengths
- PUF disk stored in 1-L glass jar
- Clean nitrile laboratory gloves
- Forceps (2 pairs)
- Teflon tape

